 


**de** Montageanleitung  
**en** Mounting instruction  
**fr** Instruction de montage  
**sv** Monteringsinstruktion  
**nl** Montage-aanwijzing  
**it** Istruzione di montaggio  
**fi** Asennus ohjeet  
**es** Instrucción de montaje  
**da** Monteringsvejledning

**Temperaturfühler**  
**Temperature sensor**  
**Sonde de température**  
**Temperaturgivare**  
**Temperatuuropnehmer**  
**Termosonda**  
**Lämpötila-anturi**  
**Sonda de temperatura**  
**Temperaturføler**


## QAP22 ARG22.2



 1831G01




A



B

ARG22.2

1831Z04

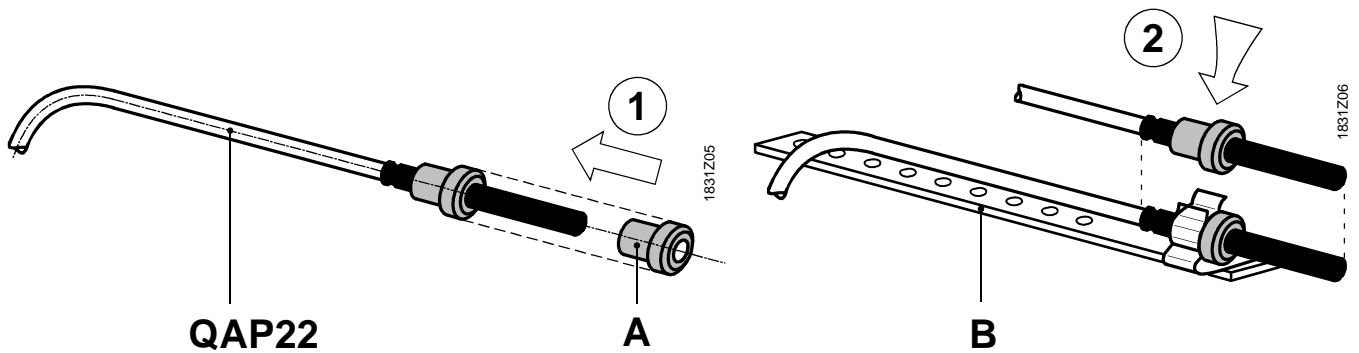

QAP22

A


B

**de** Maßbilder  
**en** Dimensions  
**fr** Encombremets

**sv** Måttuppgifter  
**nl** Maatschets  
**it** Ingombri



**fi** Mittapiirros  
**es** Dimensiones  
**da** Målskitse

### QAP22

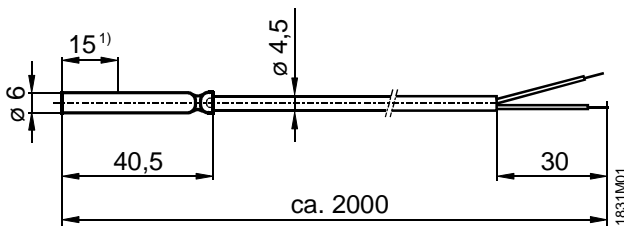

- 1) Wirksame Fühlerlänge  
 Active detector length  
 Longueur de sonde active  
 Effektiv givarlänga  
 Werkzame opnehmerlengte  
 Lunghezza attiva  
 Anturin toirniva pituus  
 Longitud de sonda activa  
 Effektiv følerlængde

### ARG22.2

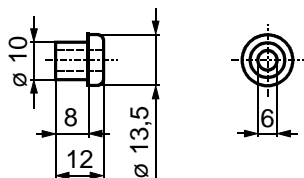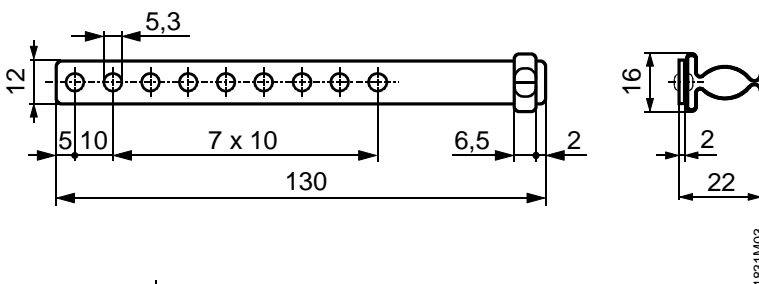

Maße in mm  
 Dimensions in mm  
 Dimensions en mm  
 Mått i mm  
 Maten in mm  
 Dimensioni in mm  
 Mitat mm  
 Dimensiones en mm  
 Mål i mm